

#### FONET opsætning for Linksys SPA2102.

110927

#### **<u>1. Nulstilling af din SPA2102 router</u>**

Hvis din router har været brugt til andre formål, kan det være en fordel at nulstille den. Derved bringes den tilbage til de indstillinger, den havde fra fabrikken, så du kun behøver at ændre de felter, som er markeret senere i denne vejledning.

Hvis du vælger ikke at nulstille den, bør du checke, at samtlige felter i denne guide svarer til din routers indstilling (bortset fra felter, hvor du evt. ønsker at bevare andre indstillinger).

For at nulstille din router skal du gøre følgende:

- 1.1) Sæt strøm til din router og slut en alm. telefon til udgangen "Phone 1". Routeren behøver ikke have forbindelse til internettet.
- 1.2) Løft røret og tast \*\*\*\*
- 1.3) En flink dame siger "Sipura Configuration Menu. Please enter option, followed by the Poundkey, or hang up to exit" (du behøver ikke at lade hende tale ud, før du går videre).
- 1.4) Indtast 877778 (damen gentager hvert tal) efterfulgt af #. Den flinke dame siger nu "Enter 1 to confirm, enter \* to exit".

En anden talsekvens, som ikke altid fungerer, men som skulle være mere effektfuld, er 73738. Benyttes på samme måde som ovennævnte og bør afprøves, hvis du har mistet adgangskoden til routeren, så du du ikke kan åbne de avancerede menuer.

- 1.5) Tast 1 for at godkende eller \* for at fortryde.
- 1.6) Hvis du taster 1, afbrydes forbindelsen, og din router er nulstillet. Taster du \*, siger damen "Cancelled" og gentager sin indledningsreplik.

#### 2. Sådan får du adgang til din router

- 2.1) Forbind din router (udgang mærket "Ethernet") til din PC vha. et netværkskabel. Du behøver ikke at have adgang til internettet.
- 2.2) Åbn din Internet Explorer og gå på adressen

192.168.0.1/admin/advanced



2.3) Du har nu adgang til routerens forside for avancerede indstillinger (se herunder). Den er delt op i to hovedafsnit, "Router" og "Voice", som hver har nogle underafsnit.



Hvis din router er ny eller er blevet nulstillet (som nævnt i afsnit 1), skal du kun ændre routerens indstillinger nogle få steder, som alle er markeret i denne vejledning.

Hvis din router har haft andre indstillinger og ikke er blevet nulstillet, vil det være en god ide at checke, at alle felter svarer til indstillingerne på de følgende sider, uanset om felterne er markerede eller ej.

VIGTIGT:	<b>IGTIGT:</b> Hver gang du har ændret indstillinger på en side, skal nu klikke på knappen "Submit All Changes" nederst på siden, før du klikker på en ny fane. Gør du ikke det, gemmes dine ændringer ikke!								
FXS Port Polarity Idle Polarity Callee Conn Polar	Configuration Forward Caller Conn Polarity: Forward Caller Conn Polarity:								
	Undo Ali Changes  Submit All Changes								

2.4) Når du er færdig med at indstille routeren og har klikket på "Submit All Changes" sidste gang, er din router klar, og du kan slukke for Explorer.

#### 3. Indstilling af "Quality of Service" (QoS)

- 3.1) Hvis du ikke allerede er inde på routeren, så gå ind som beskrevet i punkt 2.1 og 2.2.
- 3.2) Klik derefter på underafsnittet "Wan Setup".



3.3) Du skal nu ændre de felter, som er markeret på næste side.

I kassen "Maximum Uplink Speed" skal du skrive 80% af din upload-hastighed, f.eks. 205, hvis din upload er 256. Upload er det bageste tal i din internetangivelse, f.eks. 1024/256 kb/s. Se tabellen herunder – eller beregn selv 80% af din upload.

Upload-hastighed iflg.	
din internetaftale	Indtastes i router
128	102
256	205
512	410
768	614
1024	820

Router	Void	e							
Status Wan Setup	Lan Setu	o Application				<u>U</u>	ser Login	basic	advanced
Internet Connection Se	ettinas								
Connection Type:		НСР 🔽							
Static IP Settings									
Static IP:			-	NetMask:					
Gateway:									
PPPoE Settings									
PPPOE Login Name:				PPPOE Login Passwo	ord:				
PPPOE Service Name:									
Optional Settings									
HostName:				Domain:					
Primary DNS:				Secondary DNS:					
DNS Server Order:	M	anual 💌		DNS Query Mode:		Paralle	el 💌		
Primary NTP Server:				Secondary NTP Ser	ver:				
MAC Clone Settings									
Enable MAC Clone Servic	e: no	~		Cloned MAC Addres	is:				
Pemote Management									
Foable WAN Web Server				WAN Web Server D	ort	80			
Lindble whit web berver.	ine ine			WHIN WED SERVER P	ore.	00			
QOS Settings									
QOS QDisc:	TE	BF		Maximum Uplink Sp	eed:		(Kbps)		
VI AN Settings						1			
Eastle VLAN				VIAN TO:		4	[0×000-	o∼FFF]	
LINADIC VLAN.				VEAN ID.		1	Lovooo	0,000	
		Undo All Chang	ges	Submit All Chan	iges				
					<b></b>				
					Her indt	astes	80% a	af	
					upload-l	nastig	heden	pă c	lin
			/		internet	-forbi	ndelse		
					L				

3.5) Klik på knappen "Submit All Changes". Routeren gemmer nu ændringene, hvilket tager nogle sekunder. Derefter kommer du tilbage til routerbilledet. Fortsæt herefter til afsnit 4 og de øvrige router-indstillinger.



## 4. Indstilling af routerens IP-opsætning

NB: Alle indstillinger herefter sker under afsnittet "Voice".

# <u>"SIP"-menuen</u>

	Router			Voice											
Info	System	SIP	Prov	visioning	Regiona	Line 1	Line	2 User	1 Us	er 2			User Login	basic	advance
SIP Pa	rameters			70				Nav Dadi	cartion			=			
Max A	ith:			2		_	ا د	SID Lloar	Agent N	James		¢1	EPSION		
STP Se	rver Name			¢\/FE	STON	_		SIP Dec I	Iser An	ent Na	ame:	φν	LKSION		-
SIP Ac	cent Langu	age:		φ <b>ν</b> ει	COTON	_	r	DTMF Rel	av MIM	E Type	anne.	ar	polication/dt	nf-relav	,
Hook E	lash MIME	Type:		appli	cation/hor	ok-flash		Remove	ast Rec	с (ур. а.				in relay	
Lice Co	moact Hes	adar:		appin		ok nusn		Eccane D	ionlav N	y. Jame:					
DEC DE		dd.		110				Ande All		vanne.					
RFC 25	AS Call Ho	MG:		yes	×		ľ	Mark All /	AVI Pac	ckets:		L Y	es 💌		
SIP Tir	ner Value	s (sec	)												
SIP T1	:			.5			5	SIP T2:				4			
SIP T4	:			5			5	SIP Time	r B:			32	2		
SIP Tir	ner F:			32			5	SIP Time	r H:			32	2		
SIP Tir	ner D:			32			5	SIP Time	r J:			32	2		
INVITE	Expires:			240			F	ReINVITE	Expire	s:		30	)		
Reg Mi	n Expires:			1			F	Reg Max	Expires			72	200		
Reg Re	try Intvl:			30			F	Reg Retry	/ Long I	Intvl:		1	200		
Beene	nan Ctatu	o Cod		odlina											
SIT1 P	nse statu sci	is Cou	e Hai	naing											
SIT3 R	SC:					_		SIT4 RSC							
Try Ba	ckun RSC:					_		Retry Re	RSC:						
PTD D	aramotore								,						
RTP Po	art Mine	•		1638	4			TP Port	Max:			16	482		
RTP Pa	cket Size:			0.0	20			Max RTP		rr:		0			-
RTCP	Tx Interval			0.0	20				'hecksu	im:		-			
State I				-	~								<u> </u>		
Stats I	in bitt.			110	<u> </u>										
SDP P	ayload Tyj	pes													
NSE D	ynamic Pay	vload:		100			1	AVT Dyna	mic Pa	yload		10	)1		
INFOR	EQ Dynami	ic Payl	oad:				C	3726r16	Dynami	ic Pay	load:	98	3		
G726r2	24 Dynami	c Paylo	ad:	97			C	3726r32	Dynami	ic Pay	load:	2			
G726r4	40 Dynami	c Paylo	ad:	96			C	3729b Dy	namic	Paylo	ad:	99	)		
NSE C	odec Name			NSE			A	AVT Code	ec Name	e:		te	lephone-eve	ent	
G711u	Codec Nar	me:		PCM	U		C	G711a Co	odec Na	ime:		PC	CMA		
G726r1	L6 Codec N	lame:		G726	5-16		C	G726r24	Codec I	Name		G	726-24		
G726r3	32 Codec N	lame:		G726	5-32		्	3726r40	Codec I	Name		G	726-40		
G729a	Codec Nar	me:		G729	9a		C	3729b Co	odec Na	me:		G	729ab		
G723 (	Codec Nam	ie:		G723	3										
	innort Pa	ramet	ore												
Handle	VIA receiv	ved:	CI D	00	~			Handle V	A roort			0	0 ¥		
Insert		ed.		10	~			insert VI	Arnort						
Cubath	uto V/TA A-	den.		no			1	Cond Des	n To Co	Deut		n			
Substit		iar:		no	×		:	send kes	p to Sr	C Port	•	n	0		
STUNE	nable:			no			5	STUN Tes	t Enable	e:		n	0 💌		
STUNS	server:						E	EXT IP:				1	5		
EXTR	P Port Min	:						VAT Keep	Alive I	intvi:			5		
					Undo All	Changes		Subr	it All Ch	hange	S				

## "Regional"-menuen

Router Voice														
Info	System	SIP	Provision	ing	Regional	Line 1	Line 2	User 1	User 2		User	Login	basic	advance
				-										
Call Pr Dial To	rogress to	nes	Г	420	<u>     12.10(</u>	* /0 /1 )								
Second	d Dial Tone		L	420 1206	<u>@-12;10(</u>	<u>·/////</u>	(1+2)				_			
Outside	a Dial Tone		Γ	4200	<u>     16,10(</u>	*/0/1	1+2)				_			
Promot	t Tone	•	L	420 520@	<u>@-10;10(</u> )-19.620@-1	<u>·/0/1)</u> 9·10(*/0/	(1+2)				_			
Busy T	one:			420	@_20·10(	25/ 25/	1)				_			
Reorde	er Tone:		Ľ	120	<u>@_20,10(</u> @_20,10(	25/ 25/	<u>+)</u> 1)							
Off Hor	ok Warning	Tone:		180@	<u><u></u>-20,10(</u> )-10.620@0:	10(.125/.	±) 125/1+2)	)			_			
Ring B	ack Tone:			420	<u>@-20·*(1</u>	/4/1)	, _ , _ ,	,						
Confirm	m Tone:			500@	-16:1(.25/.	25/1)					_			
SIT1 T	one:			985@	-16.1428@-	16.1777@	-16:20(.)	380/0/13	80/0/23	80/0/3.0/4/0)	_			
SIT2 T	one:			914@	-16.1371@-	16.1777@	-16:20(.)	274/0/12	74/0/23	80/0/3.0/4/0)	_			
SIT3 T	one:			914@	0-16.1371@-	16.1777@	-16:20(.)	380/0/13	80/0/23	80/0/3.0/4/0)	_			
SIT4 T	one:			985@	0-16.1371@-	16.1777@	-16:20(.)	380/0/12	74/0/23	80/0/3.0/4/0)	_			
MWLD	ial Tone:			350@	)-19.440@-1	9:2(.1/.1/	(1+2):10	(*/0/1+2)		,.,.,.,.,.,	_			
Cfwd F	Dial Tone:			350@	0-19.440@-1	9:2(.2/.2/	(1+2):10	(*/0/1+2)			_			
Holding	Tone:			500@	-19:*(.1/.1	(11/.1/1	.1/9.5/1)	)			_			
Confer	ence Tone:			350@	-19:20(.1/.	1/11/9.7	/1)	, 			_			
Secure	e Call Indica	ation To	one:	397@	-19.507@-1	9:15(0/2/	02/.1/1	1/2.1/2)			_			
Feature	e Invocatio	n Tone		350@	0-16:*(.1/.1	(1)	-,,-	,			_			
					, (	-,								
Disting	ctive Ring I	Patter	ns											
Ring1 (	Cadence:		(	50(2/	/4)		1	Ring2 Cad	ence:		60(.8/.	4,.8/4	)	
Ring3 (	Cadence:		(	50(.4	/.2,.4/.2,.8/	4)	l I	Ring4 Cad	ence:		60(.3/.	2,1/.2	,.3/4)	
Ring5 (	Cadence:			L(.5/	.5)		1	Ring6 Cad	ence:		60(.2/.	4,.2/.4	4,.2/4)	
Ring7 (	Cadence:		(	50(.4	/.2,.4/.2,.4/	4)	l I	Ring8 Cad	ence:		60(0.2	5/9.75	i)	
Dicting	tivo Coll V	Maitin	Topo Dat	torr										
DISUNC	Codencer v	valung	y tone Pai	.tem	15			CWT2 CT	dan sa t		20/ 1/		0.7)	
CWT2	Cadence:			20(.3	(1 1/1	1/0.7)		CWT2 Cat	dence:		30(.1/	1 2/	9.7)	2)
CWTS	Cadence:			1/ E/	(,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	(9.7)		CWT4 Cat	dence:		30(.1/	1 3/	2 3/0	1)
CWTZ	Cadence:			20/ 3	.5) 2/1 2/1 1	(0.1)		CWT9 Cat	dence:		2 3( 3	.1,.3/. /2)	21.3/9.	1)
CWIT	Cauence.			50(.5	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	9.1)		CWID Cat	ience.		2.5(.5)	(2)		
Disting	tive Ring/	CWT P	attern Na	mes										
Ring1 I	Name:			Bello	ore-r1			Ring2 Nan	ne:		Bellco	re-r2		
Ring3 I	Name:			Bellc	ore-r3			Ring4 Nan	ne:		Bellco	re-r4		
Ring5 I	Name:			Bello	ore-r5			Ring6 Nan	ne:		Bellco	re-r6		
Ring7 I	Name:			Bellc	ore-r7			Ring8 Nan	ne:		Bellco	re-r8		
Ring a	nd Call W	aiting	Tone Spec	:										
Ring W	aveform:		l	Trap	ezoid 💌			Ring Frequ	lency:		20			_
Ring V	oltage:		1	35				CWT Freq	uency:		440@-	10		
Control Timer Values (see)														
Hook E	lash Timer	Min:	sec)	08				Hook Elas	h Timer N	lax:	Q			_
Callee	On Hook D	elav		. <u></u>				Reorder D	elay:		5			
Call Ba	ck Expires	:		-	1			Call Back	Retry Int	vI:	30			
Call Ba	ck Delay:			5				VMWI Ref	resh Inty	1	0			
Interdi	ait Long Tir	ner:		10				Interdigit	Short Tim	er:	4			
CPC D	elav:			2				CPC Dura	tion:		0			
				-				5. 5 5 6 6						

#### (fortsættes)

# "Regional"-menuen (fortsat)

Vertical Service Activation Code	2e		
Call Return Code:	*69	Call Redial Code:	*07
Blind Transfer Code:	*98	Call Back Act Code:	*66
Call Back Deact Code:	*86	Call Back Busy Act Code:	*05
Cfwd All Act Code:	*72	Cfwd All Deact Code:	*73
Cfwd Busy Act Code:	*90	Cfwd Busy Deact Code:	*01
Cfwd No Ans Act Code:	*02	Cfwd No Ans Deact Code:	*03
Cfwd Last Act Code:	*63	Cfwd Last Deact Code:	*83
Block Last Act Code:	*60	Block Last Deact Code:	*80
Accept Last Act Code:	*64	Accent Last Deact Code:	*94
CW Act Code:	*56	CW Deact Code:	*57
CW Per Call Act Code:	*71	CW Per Call Deact Code:	*70
Right CID Act Code:	*<7	Right CID Deact Code:	*co
Block CID Act Code:	*01	Block CID Dead Colle:	*00
Block CID Per Call Act Code:	*77	Block CID Per Call Deact Code:	*02
Block ANC Act Code:	*70	Block ANC Deact Code:	*8/
DND Act Code:	*/8	DND Deact Code:	*/9
CID Act Code:	105	CID Deact Code:	***
CWCID Act Code:	*25	CWCID Deact Code:	*45
Dist Ring Act Code:	*26	Dist Ring Deact Code:	*46
Speed Dial Act Code:	*74	Secure All Call Act Code:	*16
Secure No Call Act Code:	*17	Secure One Call Act Code:	*18
Secure One Call Deact Code:	*19	Conference Act Code:	
Attn-Xfer Act Code:		Modem Line Toggle Code:	*99
FAX Line Toggle Code:	#99		
Referral Services Codes:			
Feature Dial Services Codes:			
Vertical Service Announcement	Codes		
Service Anno Base Number:	codes		
Service Annc Extension Codes:			
Outbound Call Codec Selection	Codes		
Prefer G711u Code:	*017110	Force G711u Code:	*027110
Prefer G711a Code:	*017111	Force G711a Code:	*027111
Prefer G723 Code:	*01723	Force G723 Code:	*02723
Prefer G726r16 Code:	*0172616	Force G726r16 Code:	*0272616
Prefer G726r24 Code:	*0172624	Force G726r24 Code:	*0272624
Prefer G726r32 Code:	*0172632	Force G726r32 Code:	*0272632
Prefer G726r40 Code:	*0172640	Force G726r40 Code:	*0272640
Prefer G729a Code:	*01729	Force G729a Code:	*02729
Miscellaneous			
Set Local Date (mm/dd):		Set Local Time (HH/mm):	
Time Zone:	GM1+01:00	FXS Port Impedance:	2/0+/50  150hF
Daylight Saving Time Rule:	start=4/1/7;end=10/-1/7;save=1		
FXS Port Input Gain:	-6	FXS Port Output Gain:	-6
DTMF Playback Level:	-16	DTMF Playback Length:	.1
Detect ABCD:	yes 💙	Playback ABCD:	yes 💙
Caller ID Method:	DTMF(Denmark)	Caller ID FSK Standard:	bell 202 🐱
Feature Invocation Method:	Default 🗸	More Echo Suppression:	no 😽

Undo All Changes

Submit All Changes

#### "Line 1"-menuen

Router	Voice									
Info System SI	P Provisioning	Regional	Line 1	Line 2	User 1	User 2		<u>User Login</u>	basic	advanced
Line Enable:	yes	~								
Streaming Audio Se	rver (SAS)									
SAS Enable:	no	*		SAS DL	G Refresh	n Intvl:	30			
SAS Inbound RTP Sin	k:									
NAT Settings		~			an Aliva E	nable:	Voc	1		
NAT Keep Alive Msg:	\$NO			NAT Kee	ep Alive C en Alive C	Dect:	terox	<b>v</b>		
NAT Keep Alive hisy.	φ <b>ι</b> ίο			NAT NO		Just.	φικολ			
Network Settings										
SIP ToS/DiffServ Valu	le: Se	<u>komment</u>	ar	SIP Cos	S Value:		3	[0-7]		
RTP ToS/DiffServ Val	ue: Se	komment	ar	RTP Cos	5 Value:		6	[0-7]		
Network Jitter Level:	high	1	*	Jitter Bu	iffer Adju	stment:	up and	down ⊻		
SIP Settings										
SIP Port:	506	50		SIP 100	REL Enab	le:	no 🗸			
EXT SIP Port:				Auth Re	sync-Reb	oot:	ves 🗸			
SIP Proxy-Require:			_	SIP Ren	note-Part	v-ID:	ves 🗸			
SIP GUID:	no	~		SIP Deb	oua Option	n:	none	2		~
RTP Log Intyl:	0			Restrict	Source I	P:	no 🗸	1		
Referor Bye Delay:	4		_	Refer Ta	arget Bye	Delay:	0			
Referee Bye Delay:	0		_	Refer-To	o Target (	Contact:	no 🗸			
Sticky 183:	no	~						2		
Call Feature Setting	IS									
Blind Attn-Xfer Enable	no no	×		MOH Se	rver:					
Xfer When Hangup Co	onf: yes	×		Confere	ence Bridg	ge URL:				
Conference Bridge Po	orts: 3	<b>*</b>								
Proxy and Registrat	ion									
Proxy:	gw:	.fonet.dk								
Outbound Proxy:										
Use Outbound Proxy:	no	*		Use OB	Proxy In	Dialog:	yes 🗸	•		
Register:	yes	*		Make C	all Withou	ut Reg:	no 🗸			
Register Expires:	240	0		Ans Cal	l Without	Reg:	no 💌			
Use DNS SRV:	no	~		DNS SR	V Auto Pr	refix:	no 💌			
Proxy Fallback Intvl:	3600	)		Proxy R	edundan	cy Method:	Norma		~	
Voice Mail Server:				Mailbox	Subscrib	e Expires:	214748	3647		
Subscriber Informat	ion						Dit Da			1
Display ivame:		naceword		Use Aut	t ID:					
Auth ID:		Brugerna	vn	use Aut						
Mini Certificate:			VII							
SRTP Private Kev:										
I nogle netværk kan	det være nødve	ndigt at s	ette felter	ne SIP '	LOS VQ B	RTP ToS I	blanke.			
SIP User ID: Bruger	rnavn (findes på	'Mine Sic	ler' unde	r Lokalr	umre)		<u>~</u>			
	( <b>P</b>	0			• • <sup>1</sup>	× .				

Authenticate ID: Brugernavn (findes på 'Mine Sider' under Lokalnumre)

Authenticate Password: Adgangskode (findes på 'Mine Sider' under Lokalnumre)

Name: Dit navn

Caller ID Scheme: Kan sættes alt efter hvilken telefon du tilslutter

<u>SIP Port = 5060 er standard, men det kan i visse netværk være nødvendigt at sætte den til hhv. 5062 eller 5070.</u> <u>Proxy = gw1.fonet.dk er standard, men det kan i visse netværk være nødvendigt at sætte den til gw1.fonet.dk:5070</u>

#### "Line 1"-menuen (fortsat)

Supplementary Service Subscription								
Call Waiting Serv:	yes 💌	Block CID Serv:	yes 💙					
Block ANC Serv:	yes \star	Dist Ring Serv:	yes 😽					
Cfwd All Serv:	yes 🗸	Cfwd Busy Serv:	yes 💙					
Cfwd No Ans Serv:	yes 🕶	Cfwd Sel Serv:	yes 😽					
Cfwd Last Serv:	yes 🕶	Block Last Serv:	yes 😽					
Accept Last Serv:	yes 💙	DND Serv:	yes 💙					
CID Serv:	yes 🗸	CWCID Serv:	yes 💙					
Call Return Serv:	yes 💌	Call Redial Serv:	yes 💌					
Call Back Serv:	yes 💌	Three Way Call Serv:	yes 💙					
Three Way Conf Serv:	yes 💙	Attn Transfer Serv:	yes 💙					
Unattn Transfer Serv:	yes 💙	MWI Serv:	yes 🐱					
VMWI Serv:	yes 🔽	Speed Dial Serv:	yes 💙					
Secure Call Serv:	yes 🔽	Referral Serv:	yes 💙					
Feature Dial Serv:	yes 🔽	Service Announcement Serv:	no 💙					
Audia Configuration								
Preferred Codec:	G711a <b>1</b> )	Silence Supp Enable:						
Use Pref Codec Only:		Silence Threshold:	medium 🗙					
G729a Enable:	ves V	Echo Cano Enable:	ves V					
G723 Enable:	ves ¥	Echo Canc Adapt Enable:	ves ¥					
G726-16 Enable:	ves ¥	Echo Supp Enable:	ves ¥					
G726-24 Enable:	yes ¥	FAX CED Detect Enable:	yes ¥					
G726-32 Enable:	yes 🗸	FAX CNG Detect Enable:	yes ¥					
G726-40 Enable:	yes 🗸	FAX Passthru Codec:	G711a					
DTMF Process INFO:	yes 💙	FAX Codec Symmetric:	yes 💙					
DTMF Process AVT:	yes 💙	FAX Passthru Method:	NSE V					
DTMF Tx Method:	Auto 🗸	FAX Process NSE:	yes 💙					
Hook Flash Tx Method:	None 💌	FAX Disable ECAN:	no 💌					
Release Unused Codec:	yes 💙	FAX Enable T38:	yes 😽					
FAX T38 Redundancy:	1 🗸	FAX Tone Detect Mode:	caller or callee 🖌					
Dial Plan	(1120011140000		(*···· *·· ) <b>3)</b>					
Enable IR Dialing:		Emergency Number:						
chable in blaing.		chargency number.						
FXS Port Polarity Configuration								
Idle Polarity:	Forward 💌	Caller Conn Polarity:	Forward 💌					
Callee Conn Polarity:	Forward 💌							
	Undo All Changes	Submit All Changes						

- 1) Hvis du benytter internet fra Clearwire, skal du vælge Codec G729a.
- 2) Hvis du benytter Clearwire, skal du vælge "yes", ellers "no".
- 3) Du skriver den lodrette pind | ved at holde Crtl + Alt nede og taste | Du kan med fordel benytte Kopi & Indsæt: Dial Plan: (112S0l114S0l00x.lxxxxxxS0lxx.\*x.\*x.\*x.\*x.l\*xx.\*x.)

#### Husk!

## Når du har foretaget ændringer, skal du gå nederst på siden og trykke på: Submit All Changes